




E-SWITCH®

Beyond the Board

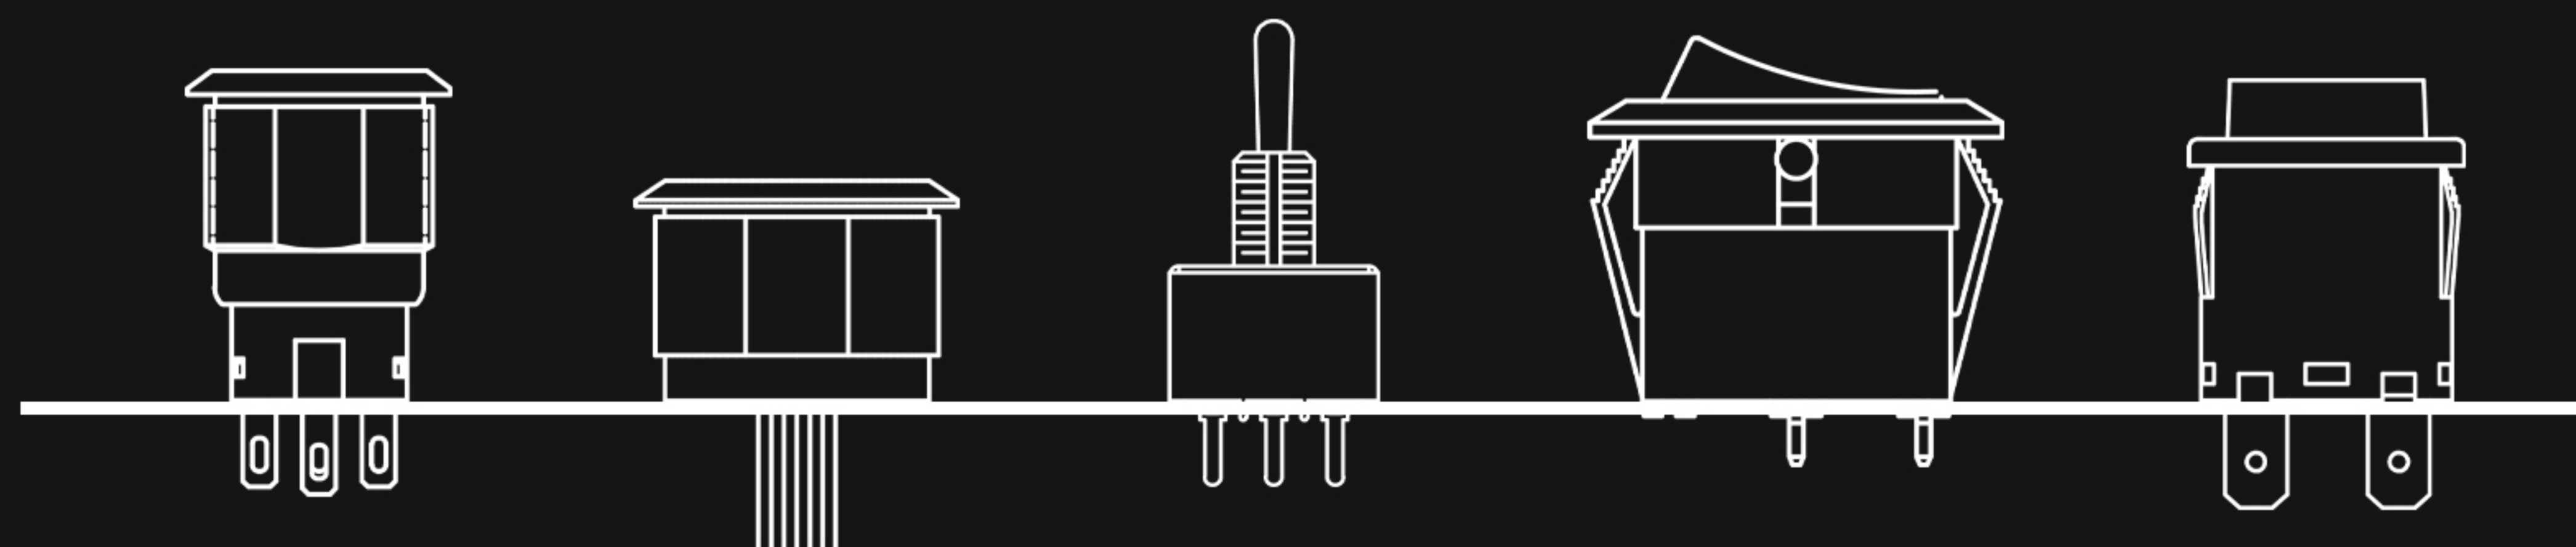

Termination Options for
Panel Mount Switches



E-SWITCH®

Beyond the
Board

ANTI-VANDAL (PV LINE)		Wire Leads	Solder	Screw	Quick Connect
	PV0 Series Anti-vandal Switch	✓	✓		
	PV1 Series Anti-vandal Switch	✓	✓	✓	
	PV10 Series Anti-vandal Switch	✓	✓		
	PV2 Series Anti-vandal Switch	✓	✓	✓	
	PV3 Series Anti-vandal Switch	✓	✓		
	PV4 Series Anti-vandal Switch	✓	✓	✓	
	PV5 Series Anti-vandal Switch	✓	✓	✓	
	PV6 Series Anti-vandal Switch	✓	✓		
	PV7 Series Anti-vandal Switch	✓	✓		
	PV8 Series Anti-vandal Switch	✓	✓		
	PV9 Series Anti-vandal Switch	✓	✓		
	PVA3 Series Anti-vandal Switch	✓	✓		
	PVA6 Series Anti-vandal Switch	✓	✓		
	PVL Series Anti-vandal Pilot Indicator	✓	✓		
	PVP Series Anti-vandal Switch Socket	✓	✓		
	PVS7 Series Anti-vandal Switch	✓	✓		
	PVT4 Series Anti-vandal Switch	✓	✓		



E-SWITCH®

Beyond the
Board

ANTI-VANDAL

Wire Leads

Solder

Screw

Quick Connect



CS Series Touch Sensor Switch



PMV6 Series Anti-vandal Switch



PZ Series Anti-vandal Switch



SAV4 Series Anti-vandal Switch



SAV7 Series Anti-vandal Switch




SAV8 Series Anti-vandal Switch



SV4 Series Anti-vandal Switch



SV7 Series Anti-vandal Switch

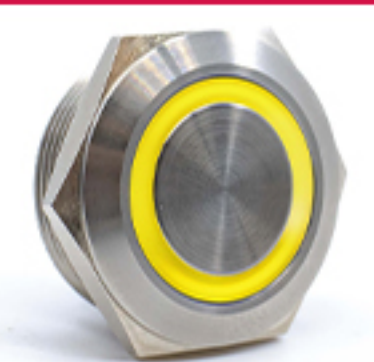

SV8 Series Anti-vandal Switch



ULV4 Series Anti-vandal Switch



ULV7 Series Anti-vandal Switch



ULV8 Series Anti-vandal Switch



KEYLOCK



PVK4 Series Anti-vandal Keylock Switch



KO Series Keylock Switch





E-SWITCH®

Beyond the
Board

ROCKER		Wire Leads	PC Pin	Quick Connect	Solder
	300 Series Rocker Switch	✓	✓		✓
	300A Series Rocker Switch	✓	✓		✓
	400 Series Rocker Switch	✓	✓		✓
	400A Series Rocker Switch	✓	✓		✓
	R1966 Series Rocker Switch	✓	✓	✓	✓
	R1973 Series Rocker Switch	✓	✓	✓	
	R4 Series Rocker Switch	✓		✓	
	R5 Series Rocker Switch	✓		✓	
	R6 Series Rocker Switch	✓		✓	
	R7 Series Rocker Switch	✓		✓	✓
	RA1 Series Rocker Switch	✓	✓	✓	✓
	RA4 Series Rocker Switch	✓	✓	✓	
	RA8 Series Rocker Switch	✓	✓	✓	
	RB1 Series Rocker Switch	✓		✓	
	RB2 Series Rocker Switch	✓		✓	
	RBW2 Series Rocker Switch	✓		✓	
	RD1 Series Rocker Switch	✓		✓	



E-SWITCH®

Beyond the Board

ROCKER		Wire Leads	PC Pin	Quick Connect	Solder
	RE1 Series Rocker Switch				
	RR1 Series Rocker Switch				
	RR3112 Series Rocker Switch				
	R3130 Series Rocker Switch				
	RR3402 Series Rocker Switch				
	RR5 Series Rocker Switch				
	RR8 Series Rocker Switch				
	RRA Series Rocker Switch				
	RRG3 Series Rocker Switch				
	RRGA Series Rocker Switch				
	RSC Series Rocker Switch				
	RVW Series Rocker Switch				
	WB2 Series Rocker Switch				



E-SWITCH®

Beyond the
Board

PUSHBUTTON

	Wire Leads	Solder	Quick Connect	PC Pin
 700 Series Snap-acting Pushbutton Switch	✓	✓	✓	✓
 D16 Series Pushbutton Switch	✓	✓		
 FS5700 Series Pushbutton Foot Switch	✓	✓		✓
 KJD17 Series Pushbutton Switch	✓		✓	
 L16 Series Pilot Indicator	✓	✓		
 LA Series Pushbutton Switch	✓	✓	✓	
 LB22 Series Pushbutton Switch	✓	✓		
 LP1 Series Pushbutton Switch	✓	✓		
 P16 Series Pushbutton Switch	✓		✓	
 PA4 Series Pushbutton Switch	✓	✓	✓	✓
 PA5 Series Pushbutton Switch	✓	✓	✓	✓
 PB1973 Series Pushbutton Switch	✓		✓	
 PB2 Series Pushbutton Switch	✓		✓	

SNAP ACTION

 WS1 Series Snap Action Switch	✓	✓		
 WS2 Series Snap Action Switch	✓	✓	✓	✓



E-SWITCH®

Beyond the Board

PUSHBUTTON (RP LINE)

	Wire Leads	Solder	Quick Connect	PC Pin	Screw
 RP3508 Series Pushbutton Switch	✓	✓			
 RP8100 Series Pushbutton Switch	✓	✓			
 RP8200 Series Pushbutton Switch	✓	✓			
 RP8300 Series Pushbutton Switch	✓	✓			
 RP8400 Series Pushbutton Switch	✓	✓			
 RP8500 Series Pushbutton Switch	✓	✓			
 RP8600 Series Pushbutton Switch	✓	✓			

SLIDE

 500 Series Slide Switch	✓	✓	✓	✓	
 EG Series Slide Switch	✓	✓		✓	

TOGGLE

 ST1 Series Toggle Switch	✓	✓	✓		✓
 ST2 Series Toggle Switch	✓	✓	✓		✓
 ST3 Series Toggle Switch	✓	✓	✓		✓
 ST4 Series Toggle Switch	✓	✓	✓		✓
 ST5 Series Toggle Switch	✓	✓	✓		✓